

PASOS DE ROSCA



m/m	Pulgadas
3	1/8"
4	5/32"
5	3/16"
6,5	1/4"
9,5	3/8"
13	1/2"
16	5/8"
19	3/4"
22	7/8"
25	1"
32	1 1/4"
38	1 1/2"
45	1 3/4"
50	2"
60	2 3/8"
70	2 3/4"
80	3 1/4"
90	3 5/8"
100	4"
110	4 3/8"

Metrica	Paso Rosca	Carga rotura	Carga trabajo
M-4	0,7	3960	2490
M-5	0,8	6390	4030
M-6	1	9040	5700
M-7	1		
M-8	1,25	16470	10380
M-10	1,5	26100	16440
M-12	1,75	37930	23900
M-14	2	51205	
M-16	2	70650	44510
M-18	2,5	91870	
M-20	2,5	110250	69460
M-22	2,5	119505	
M-24	3	135475	
M-27	3	114750	
M-30	3,5	140250	
M-33	3,5		
M-36	4		
M-39	4		
M-42	4,5		
M-45	4,5		

UNC	
Hilos	Pulgadas
20h	1/4"
18h	5/16"
16h	3/8"
14h	7/16"
13h ó 12h	1/2"
12h	9/16"
11h	5/8"
10h	3/4"
9h	7/8"
8h	1"
7h	1 1/8"
7h	1 1/4"
6h	1 3/8"
6h	1 1/2"
5h	1 5/8"
5h	1 3/4"
4,5h	1 7/8"
4,5h	2"

UNF	
Hilos	Pulgadas
28h	1/4"
24h	5/16"
24h	3/8"
20h	7/16"
20h	1/2"
18h	9/16"
18h	5/8"
16h	3/4"
14h	7/8"
14h	1"
14h	1 1/8"
14h	1 1/4"
12h	1 3/8"
12h	1 1/2"
12h	1 5/8"
12h	1 3/4"
12h	1 7/8"
12h	2"